



OPERATING MANUAL

ELECTRA LAZER

12000 DP



StrikeMaster Corporation
17217 198th Avenue
Big Lake, Minnesota 55309
Phone (763) 263-8999 • Fax (763) 263-8986
www.strikemaster.com



Ice Fishing has become one of the fastest growing and most popular winter sports, allowing the ardent angler the opportunity to enjoy his or her favorite outdoor activity.

When you selected a StrikeMaster power ice auger, you selected a product that has gained a reputation as the quality leader since 1946. And, there is no doubt that this year's model is the finest ever produced by StrikeMaster Corporation.

Your new StrikeMaster ice auger has all of the most wanted features in a power ice auger, to assure many years of enjoyable ice fishing. Some of these features such as workmanship, engineering excellence, and dependability have long been standards at StrikeMaster. Your new power ice auger boasts many new features while retaining the best features developed in previous years to enhance your ice fishing experience and add to your satisfaction in selecting StrikeMaster.

We know that you are anxious to go fishing and use your new power ice auger, but before you go fishing, it is important and to your advantage to spend a few minutes getting acquainted with your new StrikeMaster power ice auger. There is no better way to acquaint yourself with the product than to read the Owners' Manual and Operating Instructions. A few minutes spent studying this manual before your first ice fishing outing will be time well spent.

Record your Model and Serial No.'s immediately after purchase. Also, please return the enclosed WARRANTY CARD to validate your limited warranty.



THIS SYMBOL POINTS OUT IMPORTANT SAFETY INSTRUCTIONS WHICH IF NOT FOLLOWED COULD ENDANGER THE PERSONAL SAFETY AND/OR PROPERTY OF YOURSELF AND OTHERS. READ AND FOLLOW ALL INSTRUCTIONS IN THIS MANUAL AND ANY PROVIDED WITH OR ON THE EQUIPMENT ON WHICH THIS ENGINE IS USED BEFORE ATTEMPTING TO OPERATE YOUR STRIKEMASTER POWER ICE AUGER.



IMPORTANT SAFEGUARDS

It is recommended that everyone who uses this product should read the StrikeMaster OPERATING MANUAL.

1. **▲ DO NOT** use this product for other than its intended purpose.
2. **▲ DO NOT** use attachments other than those available from the manufacturer.
3. **▲ DO NOT** alter this product in any manner; doing so is dangerous and voids all warranties.
4. **▲ DO NOT** allow children or adults weighing under 100 lbs. to operate this equipment.
5. **▲ DO NOT** allow your body, loose clothing, drawstrings, scarves, hats or other materials to come in contact with the Powerhead, or Auger (Drill) unit at any time.
6. **▲ DO NOT** operate under the influence of drugs or alcohol.
7. **▲ DO NOT** continue to use this product in the event of mechanical or electrical failure.
8. **▲** This product produces considerable cutting force that is felt by the operator. Make sure your feet are firmly planted and that the handles are held firmly while operating this product.
9. **▲** During operation, the auger unit could possibly stop. Be prepared at all times to release the switch.
10. **▲** Check cutting blades and auger shaft screws before and after each use to make sure they are tight.

Assembly:

To assemble the auger to the Power Head:

1. Remove the metric allen wrench that is attached to the auger shaft near the top with tape.
2. Insert the allen wrench into the bolt at the top of the auger and remove by turning counter-clockwise.
3. Remove the protective plastic cap from the drive shaft. Insert the drive shaft of the powerhead into the plastic collar of the auger assembly.
4. Align the hole in the Auger shaft with the hole in the Power Head shaft and insert the screw. Tighten firmly, turning clockwise. There may be some "wobble" in the connection; this is normal. If the connection is too tight, dis-assembly may be difficult.

ATTENTION

Chargers come packaged separately in the Auger Carton. Battery Must be Fully Charged Before First Use.

To Charge battery for First Use:

1. Connect the charger to standard 110-volt wall outlet, a green light should appear on the charger. ALWAYS connect charger to a standard 110-volt wall outlet before connecting to auger. **NOTE: When charging, auger switch should be in off position.**
2. Plug charger into auger charging plug (Fig 1). Red light should appear on charger. Charge the battery until the light on the charger turns green.
3. To disconnect charger remove plug from wall outlet, then disconnect charger from auger.

NOTE: YOU WILL HAVE TO FULLY CHARGE THE BATTERY BEFORE THE FIRST USE. SEE ABOVE FOR CHARGING INSTRUCTIONS.

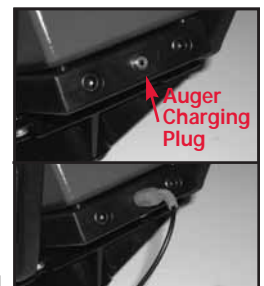


Fig. 1

To install battery:

1. Remove nuts from top of battery compartment and lift battery compartment cover off. (See Fig 1 & 2)
2. Slide battery into battery compartment, NOTE: Be sure to hold the wires in the battery compartment so they do not slide down inside compartment with the battery.
3. Connect the battery clips to the battery. (See Fig. 3) **NOTE: Make sure you hook the positive [+] battery clip (red wire) to the positive [+] terminal on the battery, and the negative [-] battery clip (black wire) to the negative [-] battery terminal.**
4. Slide battery all the way inside battery compartment while tucking the wires inside the compartment. (See Fig.4) NOTE: There will be a battery spacer in the compartment, slide this in along side the battery to keep the battery wires protected and it helps keep the battery from sliding around in the compartment.
5. Replace battery compartment cover and tighten nuts on top.
NOTE: YOU WILL HAVE TO FULLY CHARGE THE BATTERY BEFORE THE FIRST USE. SEE ABOVE FOR CHARGING INSTRUCTIONS.

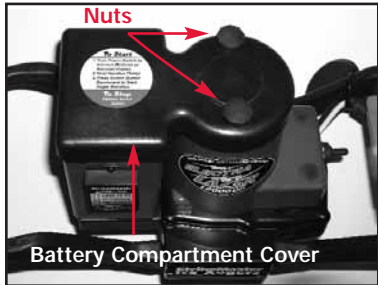 


Fig. 1

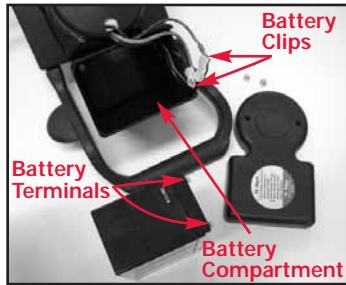 


Fig. 2



Fig. 3



Fig. 4

ATTENTION!! Battery Must be Fully Charged Prior to First Use

Operation:

1. The Electra 12000 DP can be operated using the Internal 12 volt battery or connected to an External 12 volt power source. (See instruction photos below)
2. Make sure your footing is secure and you have the unit in the vertical position, and firmly in your hands.
3. Press the Black Starter button down to start the auger turning.
4. **TO STOP** - Release the black starter button.

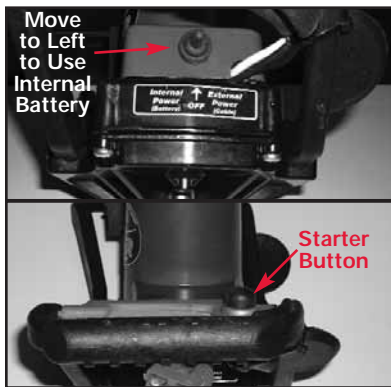


Fig. 1: To use the Internal battery source, move the battery switch from the **OFF** position to the **LEFT** (Internal). To operate, push the Black Starter Button.

Fig. 1

Fig. 2: To use an External battery source, connect the external battery cables using the wiring harness. After the wiring harness is connected to the Electra 12000 DP unit the clips can be connected to the battery source. **Red clamp to positive [+] battery post, black clamp to negative [-] battery post.** To operate, move the battery switch from the **OFF** position to the **RIGHT** (External). To operate push the Black Starter Button down.

Fig. 2



Fig. 3

Fig. 3: **ALWAYS** place the battery selection switch to the **OFF** position when the Electra 12000 DP is not in operation.

Battery Charging and Monitoring:

Fig. 1: When charging the internal 12 volt battery, using the StrikeMaster 12 volt battery charger, **ALWAYS** connect the charger to a standard 110 volt wall outlet before connecting to auger.

**Do not rely on meter indicator, use battery charger to automatically stop charging when battery is full. (Do not exceed 72 hours).

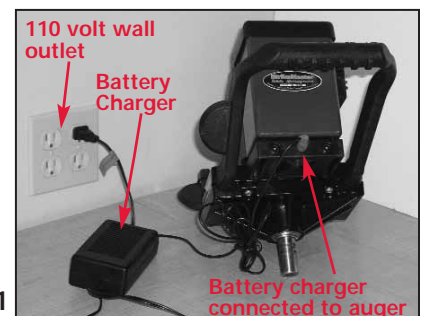


Fig. 1

Battery Charging and Monitoring Continued:

1. **Always** charge the battery at room temperature. If the battery is used in a cold environment, allow it to warm up for at least an hour before starting to charge. Cold batteries **will not** charge completely.
2. To charge the battery, **ALWAYS** connect the charger to a standard 110 volt wall outlet before connecting to auger (green light should come on. Plug charger into auger charging plug (Fig.1). Red light should appear on charger. Charge the battery until the light on the charger turns green.
3. **NOTE:** Charge times can range up to 12 hours for a completely dead battery. **DO NOT** leave the charger connected to the battery for more than 72 hours.
4. The Battery Status Indicator is mounted on the side of the Electra 12000 DP to allow you to see the level of charge in the battery. To check the charge level, simply move the battery switch from the **OFF** position to the **Internal** battery position. The **Power On** light indicates that the battery is connected properly. The other lights on the status indicator show the charge level of the **Internal** battery. **NOTE: While drilling, the battery indicator will drop considerably. To receive an accurate charge level, wait 90 seconds after drilling to read charge level.**
5. Re-charge battery after using your Electra Lazer DP.

Charging with Vehicle Adapter:

1. Insert the Vehicle Adapter into the automatic outlet socket (located on the dashboard of most vehicles). The adapter is equipped with a red light to indicate the unit is turned on. Then plug the auger charging plug into the Electra Power Head.
2. Start your vehicle engine. The alternator in the vehicle will supply the electricity to the vehicle adapter so you don't drain the vehicle battery.
 - A. It is possible to charge the battery without starting the vehicle but your vehicle battery and the discharged battery voltage will become equal. (ex. Vehicle Battery=12Vdc, Discharged Battery=1-Vdc, the result on both batteries would be around 11Vdc). It is best to always charge with the engine running.
3. Charging Time: Depending on how discharged the battery has become, the charging time can range from 1 to 12 hours. (Do not charge over 24 hours). During the charging process the red light will stay on. You will have to check the battery charge level indicator in order to see the level that the battery has been charged to.
4. When charging is finished,
 - A. Remove the Vehicle Adapter from the automotive outlet socket.
 - B. Remove the charging plug from the Electra Powerhead.
5. Store the vehicle adapter in a safe dry place.



Battery Storage:

1. For battery storage, make sure that the battery terminals are **disconnected** from the Electra 12000 DP. Connect the charger to the battery every month or two to insure that it maintains a full charge during an extended storage period. **NOTE: Always turn the battery selection switch to off, failure to do so could drain battery.**

PLACE
STAMP
HERE

StrikeMaster Corporation

17217 198th Avenue

Big Lake, Minnesota 55309



LIMITED WARRANTY

StrikeMaster Corporation, 17217 198th Avenue, Big Lake, Minnesota 55309 provides the following LIMITED WARRANTY on its products to the purchaser of these products and to any person to whom such products are transferred during the duration of this warranty.

The warrantor's obligation shall be limited to repairing or replacing at the above address, any part or parts which shall within a One Year period hereinafter specified to be returned to them with transportation prepaid (customer is responsible for shipping charges) and which upon examination, by **StrikeMaster Corporation**, shows to have been defective. This warranty shall NOT APPLY IF:

- A. The product has been altered, repaired or modified outside the warrantor's place of business in any way that would adversely affect its operation.
- B. The product has been subjected to misuse or damage while in the possession of the purchaser or was operated or used other than in accordance with the manufacturer's operating instructions.
- C. The product failure is attributed to damage which is the sole responsibility of the user.

The One Year limited warranty period shall commence with the date the product is sold to the purchaser by the dealer, or if this date cannot be established, the date the product was sold by **StrikeMaster Corporation** to the distributor or dealer.

THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR PARTICULAR PURPOSES ARE LIMITED TO THE DURATION OF THIS WARRANTY — One Year — AFTER SAID One Year **StrikeMaster Corporation** EXPRESSLY DISCLAIMS ANY WARRANTY OR MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE.

Purchase or other acceptance of the product by the claimant shall be on the condition and agreement that **StrikeMaster Corporation** SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY KIND.

Some states do not allow limitations on how long an implied warranty lasts or do not allow the exclusion or limitations of incidental or consequential damages, so the above limitation or exclusions may not apply to you.

To make claim under this warranty, write directly to "**CUSTOMER SERVICE**", **StrikeMaster Corporation** at the above address for a warranty return authorization. **StrikeMaster Corporation** will make every effort to repair or replace the product if found to be defective within the terms of this warranty within 30 days after receipt of the product.

NOTE: This warranty gives you specific legal rights, and you may also have other rights which vary from State to State.

Warranty Registration

This registration card must be returned to StrikeMaster Corporation to validate the One Year Limited Warranty. Register online at www.strikemaster.com/warranty.html

NAME _____ DATE PURCHASED _____

ADDRESS _____

CITY _____ STATE _____ ZIP _____

SERIAL NUMBER _____ E-MAIL _____

PRODUCT PURCHASED	SIZE	PRODUCT PURCHASED	SIZE
<input type="checkbox"/> MORA Hand Auger	_____	<input type="checkbox"/> Electra Lazer 12000 DP	_____
<input type="checkbox"/> Lazer Hand Auger	_____	<input type="checkbox"/> Strike-Lite	_____
<input type="checkbox"/> Lazer Mag Xpress	_____		
<input type="checkbox"/> Mag 2000	_____		

PURCHASER: Male Female

AGE: _____

PURCHASED AS A: Gift Own Use
 PURCHASED AT: Local Dealer Catalog
 Chain Store
 On-Line

Would you like future new product releases and information from StrikeMaster sent to your email?

Yes / No Email address _____ SM08

763-263-8999
www.strikemaster.com
 Fax: 763-263-8986

SEE SPECIAL BROCHURE

- Replacement Blades
- Blade Exchange Service
 - Blade Guards
 - Auger Extensions
 - Gift Ideas



Customer Service

Continued satisfying performance from your StrikeMaster power ice auger may be assured by applying a minimum amount of preventive maintenance when it is required. The following information is intended to inform you as to where and how you may obtain additional service support.

Should you wish to send or deliver your StrikeMaster auger for service, please contact:

StrikeMaster Corporation at 763-263-8999 for the service center nearest you.

Or, visit our website under customer support, then service centers for a full list of authorized service centers:

www.strikemaster.com/service.html

If for any reason you are in doubt, or have any questions regarding the proper operation or use of this product, please feel free to call during regular business hours or write to: (Sorry - No Collect Calls)

StrikeMaster Corporation
17217 198th Avenue
Big Lake, Minnesota, USA 55309
Phone: (763) 263-8999 Fax: (763) 263-8986
www.strikemaster.com



StrikeMaster Corporation
17217 198th Avenue
Big Lake, Minnesota 55309
Phone (763) 263-8999 • Fax (763) 263-8986
www.strikemaster.com